



Torque screwdriver technic

A range of compact and versatile torque screwdrivers with automatically actuating, dial-indicating and measuring torque.



Type FS 755

Pre-set torque screwdriver without scale for durable and identical value tightening
Auto setting
Bidirectional
Anodised aluminium handgrip



Type 756

Adjustable torque screwdriver with micrometre scale
"Positive-lock"-system
Drive type made of stainless steel
Auto setting
Bidirectional
Non-slip rubber handgrip
EPA > see product



Type S 757

Adjustable torque screwdriver with micrometre scale
Auto setting
Bidirectional
Anodised aluminium handgrip




Type SP 758

Dial-indicating torque screwdriver with dual scale
Locking of maximum values / maximum value-display
Bidirectional
Anodised aluminium handgrip
EPA > see product




Scope of delivery

We supply a 1/4"-1/4"-drive adaptor with all models
To make work easier, a sliding or removable T-bar is included with several models



Special models

Optionally, all torque screwdrivers are also available with a 1/4" male square drive spindle.
Apart from that: Torque screwdrivers for the medical "clean-room" area are available on request.

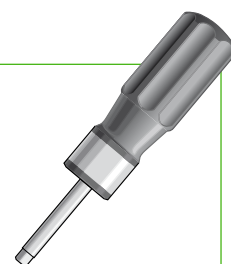

757

TORQUE SCREWDRIVER TYPE S 0.2-9 N-m

Use:



- Controlled screw tightening in the range 20 cN-m - 9 N-m
- High-speed, controlled tightening enables serial production
- Electrical and electronic hardware industry, instrument-making industry and industrial manufacturing or in quality control

Features:

- Adjustable torque screwdriver with scale
- With 1/4" female hexagon drive for use with 1/4" hexagon bits as per DIN 3126 - C 6.3
- With adaptor also suitable for 1/4" square drive sockets as per DIN 3124
- Working accuracy: +/- 6 % tolerance of the set torque
- Acc. to DIN EN ISO 6789, traceable to national standards
- Precision radial ball clutch and cam design for controlled bi-directional tightening
- Precision mechanism slips very noticeably through when set torque is reached
- Automatic resetting to the starting position
- Locking of the value by means of an adjusting knob
- 3 models in the range 20 cN-m to 9 N-m
- Micrometre scale graduation: 1 cN-m / 0.1 N-m
- Lightweight construction by virtue of anodised aluminium handgrips

Scope of delivery:


- Torque screwdriver type 757
- 1/4" square/hexagon drive adaptor (no. 757-20)
- Models 757-06/-09 with additional sliding T-bar for ease of use
- Test certificate acc. to DIN EN ISO 6789
- Delivered in sturdy cardboard packaging



Hexagon	Hexagon	Hexagon	Hexagon	cN-m	N-m	Length	Scale	Colour	Weight	Code	No.
1/4"	6.3	1/4"	6.3	20-120		169	1,0 cN-m	black	0.165	7718050	757-01
1/4"	6.3	1/4"	6.3		1-6	184	0,1 N-m	red	0.400	7718130	757-06
1/4"	6.3	1/4"	6.3		4-9	184	0,1 N-m	green	0.400	7718210	757-09



Torque screwdrivers 756

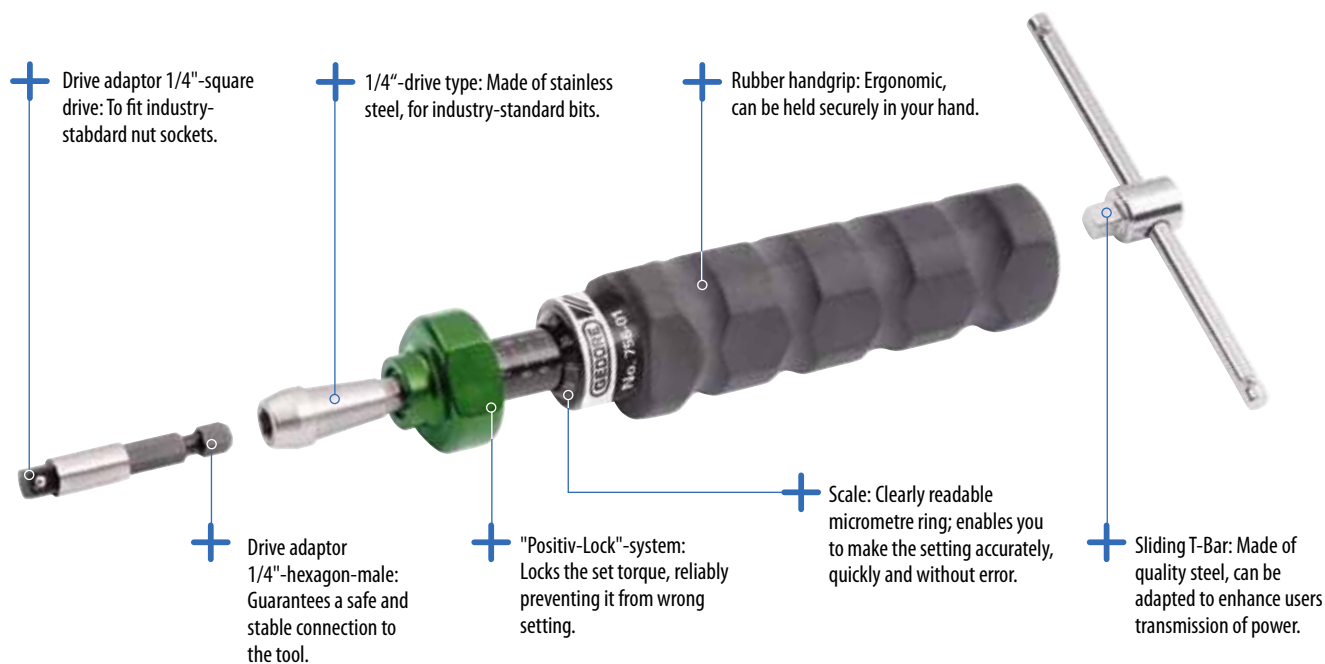
756

TORQUE SCREWDRIVER TYPE S 0,08-9 N-m

Use:

- Controlled screw tightening in the range 0.08 - 9 N-m
- High-speed, controlled tightening enables serial production
- Electrical and electronic hardware industry, instrument-making industry and industrial manufacturing or in quality control

Features:

- Adjustable torque screwdriver - with scale
- With 1/4" female hexagon drive for use with 1/4" hexagon bits as per DIN 3126 - C 6.3
- With adapter also suitable for 1/4" square drive sockets as per DIN 3124
- Actuation accuracy: +/- 6 % tolerance of the set value
- Acc. to DIN EN ISO 6789, traceable to national standards
- Precision radial ball clutch and cam design for controlled bi-directional tightening
- Precision mechanism slips very noticeably through when the set torque is reached
- Automatic resetting to the starting position
- "Positive-Lock" system automatically fixes the set value preventing it from wrong setting.
- 4 models in the range 0.05 N-m to 9 N-m
- Micrometre scaling: 1 cN-m and 0.1 N-m
- Very convenient, lightweight and non-slip rubber handgrip
- EPA-conformant (Electrostatic Protected Area), for use in sensitive electrostatic applications

Scope of delivery:



- Torque wrench type 756
- 1/4" square/hexagon drive adapter (no. 757-20)
- Models 756-06/-09 with additional sliding T-bar for ease of use
- Test certificate acc. to DIN EN ISO 6789
- Delivered in sturdy cardboard packaging

6.3

1/4"

6.3

1/4"



Hex "	Hex	Hex "	Hex	cN-m	N-m	mm	mm	Colour	kg	Code	No.
1/4	6.3	1/4	6.3	8-40		159	1 cN-m	silver	0.124	1498738	756-00
1/4	6.3	1/4	6.3	20-120		183	1 cN-m	blue	0.165	1400150	756-01
1/4	6.3	1/4	6.3		1-6	196	0,1 N-m	red	0.340	1400169	756-06
1/4	6.3	1/4	6.3		4-9	196	0,1 Nm	green	0.340	1400177	756-09



755

TORQUE SCREWDRIVER TYPE FS 0.04-13,6 N·m / pre-set

Use:

- Controlled screw tightening in the range 0.04 - 13.6 N·m
- Serial manufacture with constant tightening value
- Electronic industry, precision mechanics and industrial manufacturing

Features:

- Pre-set torque screwdriver without a scale
- With 1/4" female hexagon drive for use with 1/4" hexagon bits as per DIN 3126 - C 6.3
- With adaptor also suitable for 1/4" square drive sockets as per DIN 3124
- Working accuracy: +/- 6 % tolerance of the set torque
- Acc. to DIN EN ISO 6789, traceable to national standards
- Precision radial ball clutch and cam design for controlled bi-directional tightening
- Precision mechanism slips very noticeably through when the set torque is reached
- Automatic resetting to the starting position
- Lightweight construction by virtue of anodised aluminium handgrips
- The pre-setting can be made at the factory or by the user on suitable torque testers
- If ordering, please specify the N·m value - if a fixed factory setting is desired (price on request)

Scope of delivery:

- Torque screwdriver type 755
- 1/4" square/hexagon drive adaptor (no. 757-20)
- Model 755-05 with additional removable T-bar for ease of use
- Test certificate acc. to DIN EN ISO 6789
- Delivered in sturdy cardboard packaging





6.3

1/4"

6.3

1/4"



1/4"	6.3	1/4"	6.3	cN·m	N·m	178 mm	Colour	kg	Code	No.
1/4"	6.3	1/4"	6.3	4-22		76	red	0.050	1471481	755-01
1/4"	6.3	1/4"	6.3	4-22		104	gold	0.072	1471473	755-02
1/4"	6.3	1/4"	6.3	14-135		111	blue	0.210	1471465	755-03
1/4"	6.3	1/4"	6.3	50-400		127	green	0.280	1471457	755-04
1/4"	6.3	1/4"	6.3		2,5-13,6	137	black	0.325	1228501	755-05

758

TORQUE SCREWDRIVER TYPE SP 10-500 cN·m / 14 ozf·in - 40 lbf·in

Use:


- In the torque range 10 cN·m - 500 cN·m
- For test and installation work in the electrical and electronic hardware industry, instrument-making industry and industrial manufacturing or in quality control

Features:

- Dial-indicating torque and test screwdriver - with dual scale (cN·m/ozf·in/lbf·in)
- With 1/4" female hexagon drive for use with 1/4" hexagon bits as per DIN 3126 - C 6.3
- With adapter also suitable for 1/4" square drive sockets as per DIN 3124
- Display accuracy: +/- 6 % tolerance of the indicated value
- Acc. to DIN EN ISO 6789, traceable to national standards
- For controlled bi-directional tightening
- With slave-pointer function
- For locking of maximum values / maximum-value display
- 4 models in the range 10 cN·m to 500 cN·m
- Lightweight construction by virtue of anodised aluminium handgrips
- EPA-conformant (Electrostatic Protected Area), for use in sensitive electrostatic applications**

Scope of delivery:

- Torque screwdriver type 758
- 1/4" square/hexagon drive adapter (no. 757-20)
- Models 758-25/-50 with additional sliding T-bar for ease of use
- Test certificate acc. to DIN EN ISO 6789
- Delivered in sturdy cardboard packaging

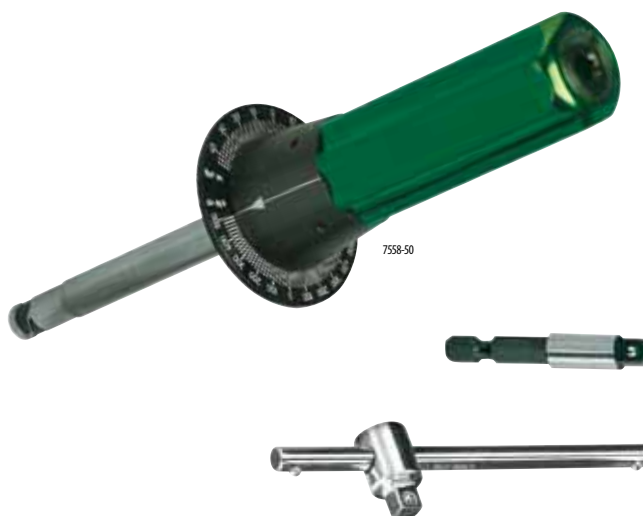


6.3

1/4"

6.3

1/4"



1/4"	6.3	1/4"	6.3	cN·m	ozf·in / lbf·in	178 mm	178 mm	Colour	kg	Code	No.
1/4"	6.3	1/4"	6.3	10-50	14-70 ozf·in	178	2 cN·m / 2 ozf·in	gold	0.190	7096380	758-05
1/4"	6.3	1/4"	6.3	20-100	28-140 ozf·in	178	5 cN·m / 5 ozf·in	blue	0.190	7096460	758-10
1/4"	6.3	1/4"	6.3	50-250	4-20 lbf·in	250	10 cN·m / 0,5 lbf·in	red	0.465	7096540	758-25
1/4"	6.3	1/4"	6.3	100-500	8-40 lbf·in	250	20 cN·m / 1 lbf·in	green	0.465	7096620	758-50